



Instructions




SL-199-2U

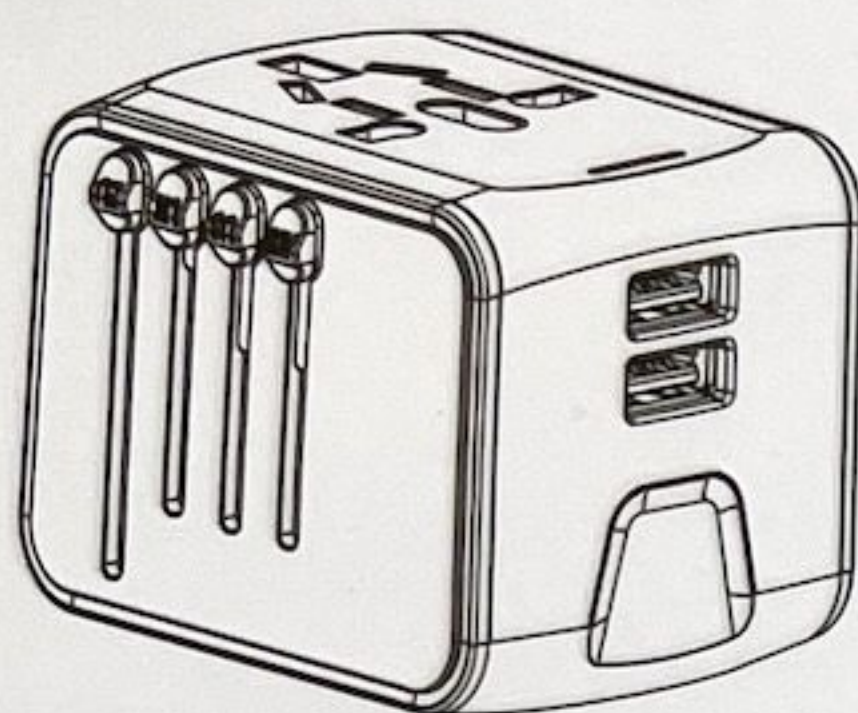

SL-199-PD

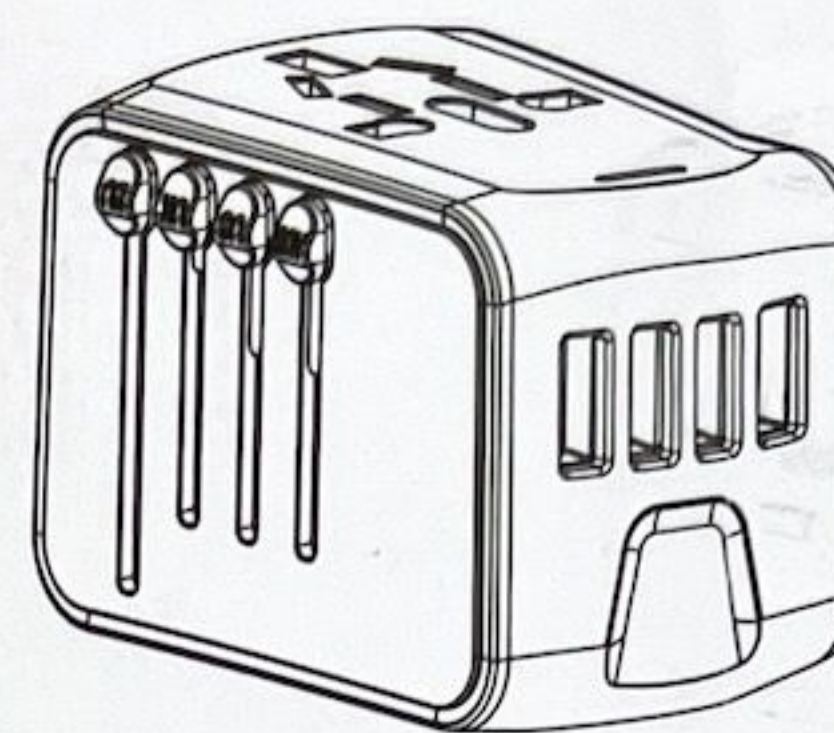


SL-199-4U

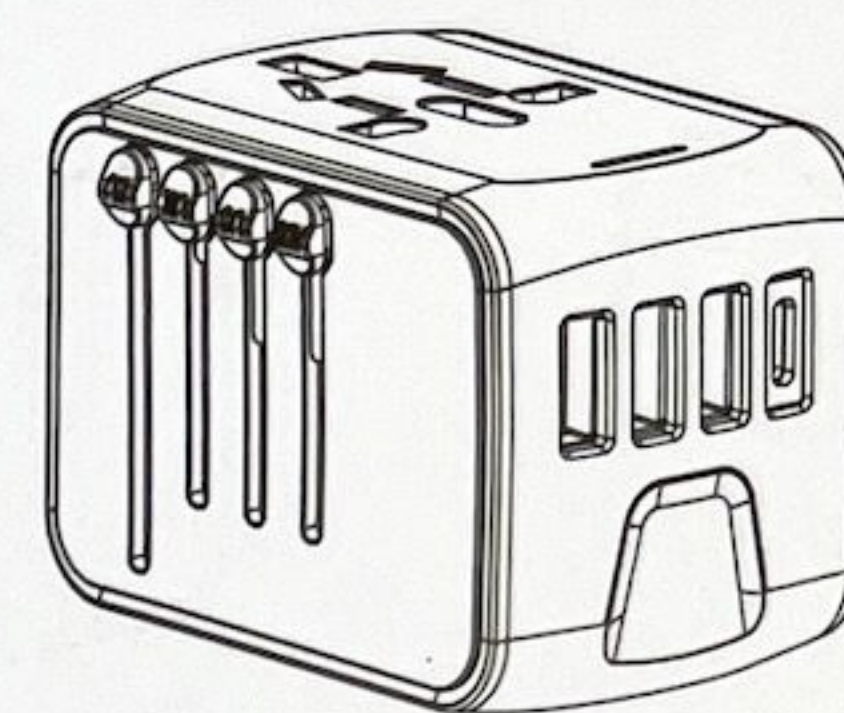


SL-199-3U-T

Model	SL-199-2U	SL-199-PD	SL-199-4U	SL-199-3U-T
Type-C Output	/	PD 5V = 3A/9V = 2.22A/12V = 1.67A	/	5V=3A
USB-A Output	5V=2.4A	QC 5V = 3A/9V = 2A/12V = 1.5A	5V=2.4A	
USB Output (Total)	5V=2.4A	5V=3A	5V=3.4A	
Max Power	250V~6.3A/1575W 110V~6.3A/693W			
Input	100-250V~ 50/60Hz 0.6A			
Dimension	54.3mm*52.6mm*67.3mm			

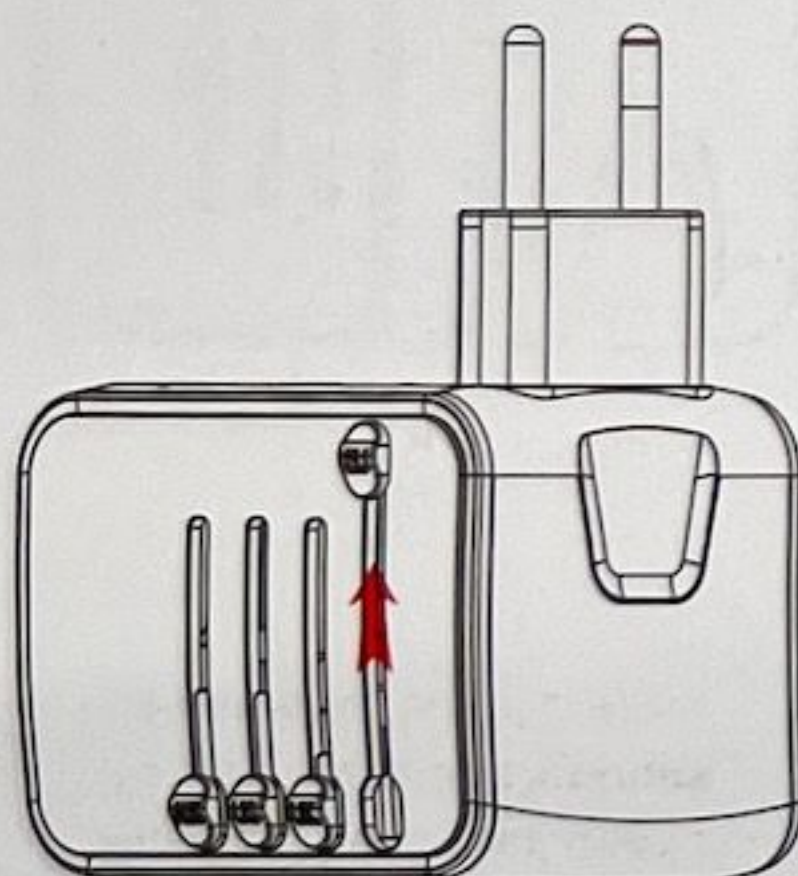


Europe

Push EU button out, used in
Finland/German/Denmark
France/Norway/Poland

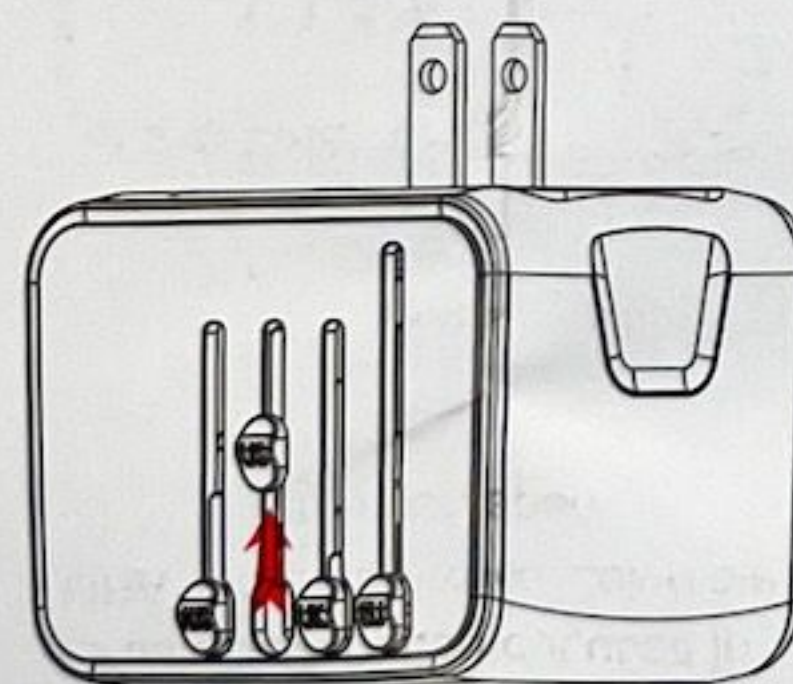

USA

Push USA button out, used in
USA/Canada/Mexico/Columbia
Panama/Japan

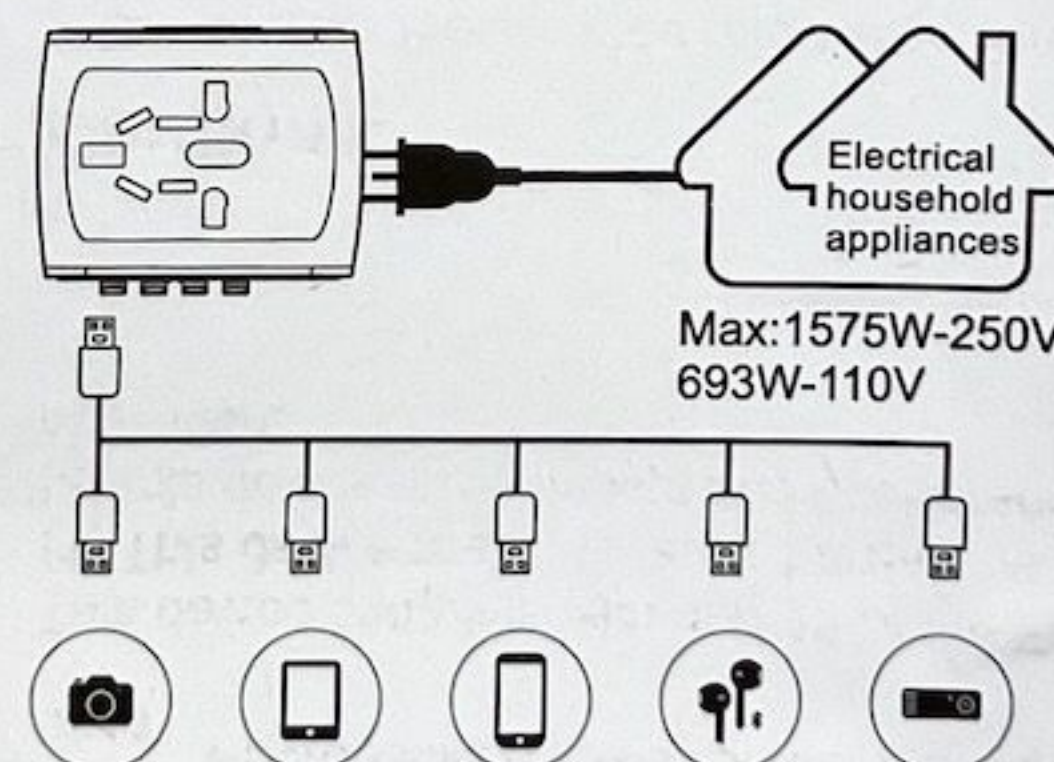

Note: This product may work with certain high power appliances such as hair dryers max 1575W.

Max. 1575w

Check your appliance label to see if it requires less than 6.3A.




Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority for recycling advice.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.




Cautions:

- Before use, Please read this instruction carefully! This product does not convert voltage (AC-AC), in order to avoid possible damage to your device or other safety hazards, please make sure the power outlet you intend to use has the proper voltage to run your device BEFORE using this adapter.
- Each country has its own regulations regarding the use of travel adapters, please check in each country before use.
- No grounding, this product is for use with unearthed or doubleinsulated appliances only.
- Covers more than 150 countries with US/EU/UK/AU plugs.
- Built-in safety shutters protect users from the direct touch of the live parts on the socket outlet.
- Only one plug-type can be used at one time, other plug-pins are locked automatically.

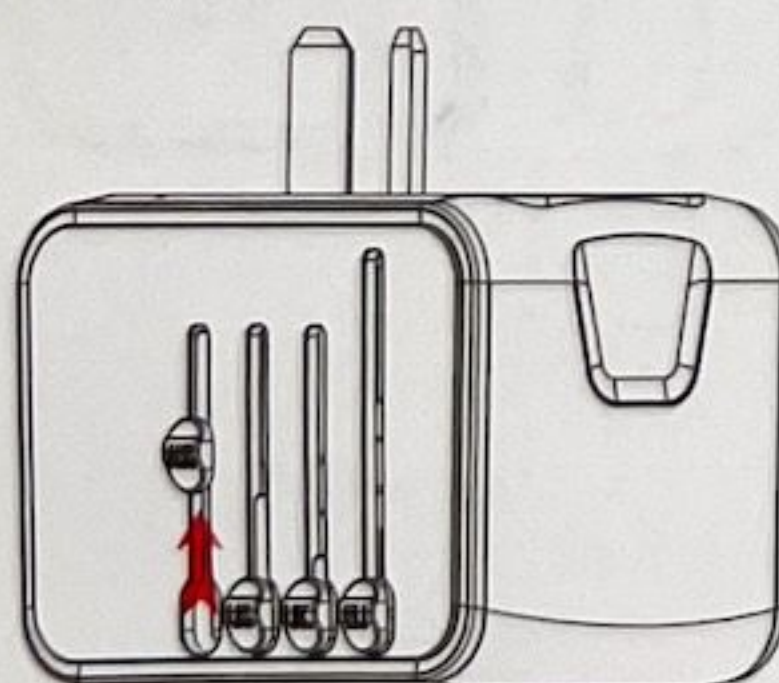

Australia / New Zealand

Push AUS button out, used in
China/Australia/Argentina
Fiji/New Zealand

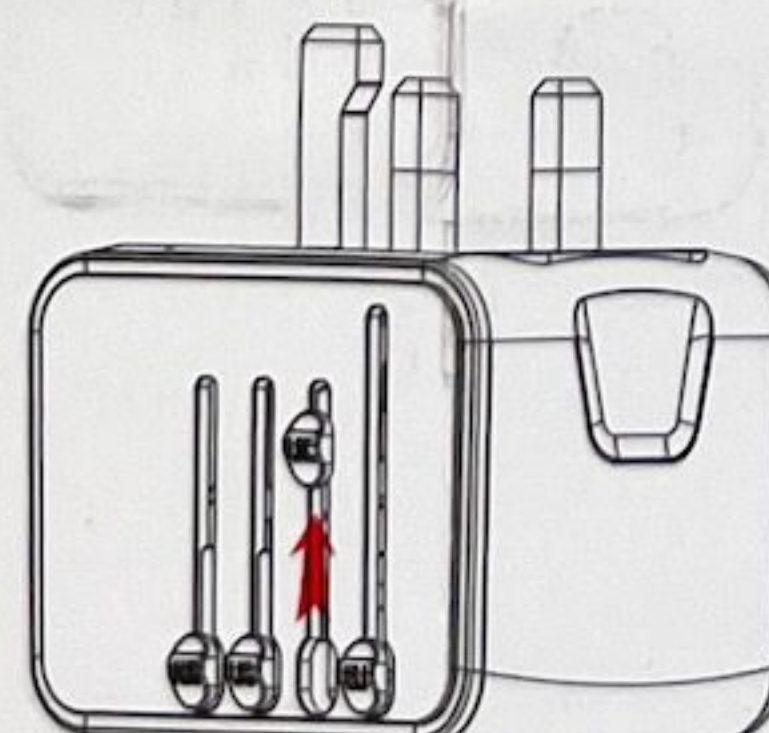

United Kingdom

Push UK button out, used in
UK/Singapore/Malaysia/Kenya
Hongkong